



01

PREPARATION VORBEREITEN



Test the substrate: Before processing, check to ensure that the substrate is suitable for the intended application. The substrate must be dry, stable and dust-free, clean and smooth. Prior to processing, the material should ideally be laid flat and acclimatised 24h.

Mineralische Untergründe müssen fest, dauerhaft trocken, ausreichend tragfähig und frei von Staub, Lösungsmitteln, Farbe, Wachs, Fett und Öl sein. Stark saugende Untergründe müssen mit lösemittelfreiem Haftgrund vorbehandelt werden.

Gipskartonplatten müssen fest und in Qualitätsstufe Q3 vorbereitet sein.

02

TOOL CHECK WERKZEUG




GOOD TOOLS GOOD JOB
ALLES LEICHTER WENN DU
NICHTS SUCHEN MUST

ruler
painter quast
cutter knife
paintbrush
bucket of water

Zollstock
Malerquast
Cuttermesser
Malerbürste
Eimer mit Wasser

03

THE GLUE DER KLEBER

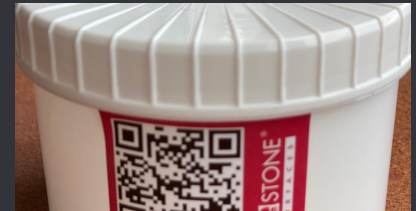

TRANSPARENT WITHOUT
STAINING
DURCHSICHTIG

Apply our glue for indoor basic installation on sealed appropriate surfaces, using our glue mix with 2.5 l of cold water, leave for 15 mins, then mix again, until you get a jelly mass. Use a roller/ brush to cover wall area and the back of your roll.

Kleber mit 2,5 l kaltem Wasser anrühren . 15 Minuten stehen lassen und dann auf die Wand auftragen

LET'S DO IT LOS GEHT'S

IN A GOOD MOOD



Hang Roll from the top/ let roll down the wall ensuring roll is fixed at the top. Apply pressure to surface with roller / wallpaper applicator. Cut roll length at bottom using. Staley knife/ ensure roll is stuck
Sweep your hand over the surface or use a pressure roller to ensure and remove any air pockets. This check should be performed repeatedly, to ensure that the full surface of the material is bonded.
Rollen wie eine normale Tapete beim tapezieren aufrollen und von oben nach unten an die Wand mit einer Bürste andrücken.

THE JOINTS FUGEN

JOINT FILLER IN COLOR



The product comes supplied with a pot of filling compound for filling joints, corners and edges.
Tips: Apply masking tape down the joints 5mm gap Apply joint paste using spatula
Peel off masking tape whilst paste is wet Repeat over all joints/ around edges
Seiten mit Malertape ankleben und mit einem Cuttermesser die Fuge ausspachteln. Die Fugenfarbe wird mit geliefert und kann farblich abweichen.

SUPPORT SERVICE

01 ONLINE CHAT
www.rollbeton.co.uk
Booking your appointment
www.rollbeton.co.uk
Buche Deinen Termin

02 SHOWROOM
Visit us in our showroom.
United Kingdom
www.xstonesurfaces.co.uk
Germany
www.coreurope.com

03 CALL US FOR HELP
United Kingdom
+44 73 75 420 202
Germany
+49 72 44 94 74 195

BRAND SINCE 2007



CONCRETE ON A ROLL

INNOVATIVE PRODUCTS
SINCE 15 YEARS. WE ARE
THE WORLD LEADERS IN THE
PRODUCTION AND
MANUFACTURE OF THE
ORIGINAL ROLLBETON

DECORATIVE WALL FINISHES

Our incredible range of wallpapers are handmade technological innovations designed with stone veneer manufactured following the eco-friendly laws and principles of Germany and European Standards.

Composed of 95% organic recycled stone and metal powders this versatile product gives homeowners, architects and designers the ability to interpret their designs in a whole new light whilst the easy installation opens up many DIY projects, home decoration,

commercial utilisation and furniture making.

Our decorative wall finishes enable you to have the beauty of real stone with the benefits of a lightweight veneer.

Each flexible sheet is 2mm thick making it perfect for eye catching indoor and outdoor applications.

Our product can be used for furniture (bendable to 90 degrees); feature walls, kitchens, bathrooms, shower enclosures and much more.

Made in germany